


Model: CAT3

DC or AC Powered Microprocessor Controlled Transmitter

USER'S MANUAL

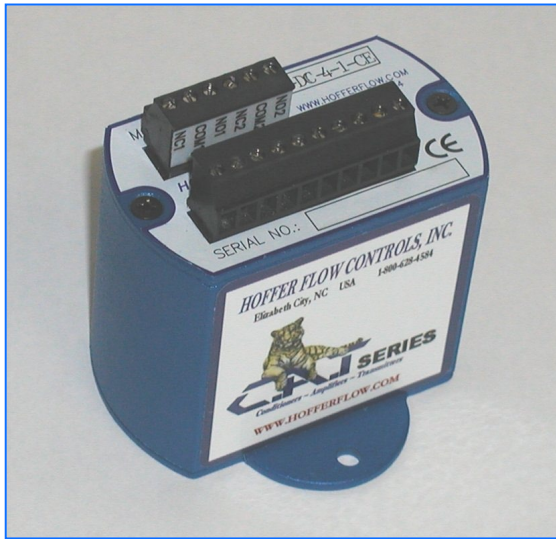

HP-312
August 2021

HOFFER

Flow Controls

Perfecting Measurement™

107 Kitty Hawk Lane • P.O. Box 2145 • Elizabeth City, NC 27909
1-800-628-4584 • (252) 331-1997 • Fax (252) 331-2886
www.hofferflow.com email: info@hofferflow.com

NOTICE

HOFFER FLOW CONTROLS, INC. makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

This manual has been provided as an aid in installing, connecting, calibrating, operating, and servicing this unit. Every precaution for accuracy has been taken in the preparation of this manual; however, HOFFER FLOW CONTROLS, INC. neither assumes responsibility for any omissions or errors that may appear nor assumes liability for any damages that may result from the use of the products in accordance with information contained in the manual.

HOFFER FLOW CONTROLS' policy is to provide a user manual for each item supplied. Therefore, all applicable user manuals should be examined before attempting to install or otherwise connect a number of related subsystems. During installation, care must be taken to select the correct interconnecting wiring drawing. The choice of an incorrect connection drawing may result in damage to the system and/or one of the components.

Please review the complete model number of each item to be connected and locate the appropriate manual(s) and/or drawing(s). Identify all model numbers exactly before making any connections. A number of options and accessories may be added to the main instrument, which are not shown on the basic user wiring. Consult the appropriate option or accessory user manual before connecting it to the system. In many cases, a system wiring drawing is available and may be requested from HOFFER FLOW CONTROLS.

This document contains proprietary information, which is protected by copyright. All rights are reserved. No part of this document may be photocopied, reproduced, or translated to another language without the prior written consent of HOFFER FLOW CONTROLS, INC.

HOFFER FLOW CONTROLS' policy is to make running changes, not model changes, whenever an improvement is possible. This affords our customers the latest in technology and engineering. The information contained in this document is subject to change without notice.

Return Requests / Inquiries

Direct all warranty and repair requests/inquiries to the Hoffer Flow Controls Customer Service Department, telephone number (252) 331-1997 or 1-800-628-4584. BEFORE RETURNING ANY PRODUCT(S) TO HOFFER FLOW CONTROLS, PURCHASER MUST OBTAIN A RETURNED MATERIAL AUTHORIZATION (RMA) NUMBER FROM HOFFER FLOW CONTROLS' CUSTOMER SERVICE DEPARTMENT (IN ORDER TO AVOID PROCESSING DELAYS). The assigned RMA number should then be marked on the outside of the return package and on any correspondence.

FOR **WARRANTY** RETURNS, please have the following information available BEFORE contacting HOFFER FLOW CONTROLS:

1. P.O. number under which the product was PURCHASED,
2. Model and serial number of the product under warranty, and
3. Repair instructions and/or specific problems relative to the product.

FOR **NON-WARRANTY** REPAIRS OR CALIBRATIONS, consult HOFFER FLOW CONTROLS for current repair/ calibration charges. Have the following information available BEFORE contacting HOFFER FLOW CONTROLS:

1. P.O. number to cover the COST of the repair/calibration,
2. Model and serial number of the product and
3. Repair instructions and/or specific problems relative to the product.

Limited Warranty

HOFFER FLOW CONTROLS, INC. ("HFC") warrants HFC's products ("goods") described in the specifications incorporated in this manual to be free from defects in material and workmanship under normal use and service, but only if such goods have been properly selected for the service intended, properly installed and properly operated and maintained. This warranty shall extend for a period of one (1) year from the date of delivery to the original purchaser (or eighteen (18) months if the delivery to the original purchaser occurred outside the continental United States). This warranty is extended only to the original purchaser ("Purchaser"). *Purchaser's sole and exclusive remedy is the repair and/or replacement of nonconforming goods as provided in the following paragraphs.*

In the event Purchaser believes the goods are defective, the goods must be returned to HFC, transportation prepaid by Purchaser, within twelve (12) months after delivery of goods (or eighteen (18) months for goods delivered outside the continental United States) for inspection by HFC. If HFC's inspection determines that the workmanship or materials are defective, the goods will be either repaired or replaced, at HFC's sole determination, free of additional charge, and the goods will be returned, transportation paid by HFC, using the lowest cost transportation available.

Prior to returning the goods to HFC, Purchaser must obtain a Returned Material Authorization (RMA) Number from HFC's Customer Service Department within 30 days after discovery of a purported breach of warranty, but no later than the warranty period; otherwise, such claims shall be deemed waived. See the Return Requests/Inquiries Section of this manual.

If HFC's inspection reveals the goods are free of defects in material and workmanship or such inspection reveals the goods were improperly used, improperly installed, and/or improperly selected for service intended, HFC will notify the purchaser in writing and will deliver the goods back to Purchaser upon (i) receipt of Purchaser's written instructions and (ii) the cost of transportation. If Purchaser does not respond within thirty (30) days after notice from HFC, the goods will be disposed of in HFC's discretion.

HFC does not warrant these goods to meet the requirements of any safety code of any state, municipality, or other jurisdiction, and Purchaser assumes all risk and liability whatsoever resulting from the use thereof, whether used singly or in combination with other machines or apparatus.

This warranty shall not apply to any HFC goods or parts thereof, which have been repaired outside HFC's factory or altered in any way, or have been subject to misuse, negligence, or accident, or have not been operated in accordance with HFC's printed instructions or have been operated under conditions more severe than, or otherwise exceeding, those set forth in the specifications for such goods.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. HFC SHALL NOT BE LIABLE FOR ANY LOSS OR DAMAGE RESULTING, DIRECTLY OR INDIRECTLY, FROM THE USE OR LOSS OF USE OF THE GOODS. WITHOUT LIMITING THE GENERALITY OF THE FOREGOING, THIS EXCLUSION FROM LIABILITY EMBRACES THE PURCHASER'S EXPENSES FOR DOWNTIME OR FOR MAKING UP DOWNTIME, DAMAGES FOR WHICH THE PURCHASER MAY BE LIABLE TO OTHER PERSONS, DAMAGES TO PROPERTY, AND INJURY TO OR DEATH OF ANY PERSONS. HFC NEITHER ASSUMES NOR AUTHORIZES ANY PERSON TO ASSUME FOR IT ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OR USE OF HFC'S GOODS, AND THERE ARE NO ORAL AGREEMENTS OR WARRANTIES COLLATERAL TO OR AFFECTING THE AGREEMENT. *PURCHASER'S SOLE AND EXCLUSIVE REMEDY IS THE REPAIR AND/OR REPLACEMENT OF NONCONFORMING GOODS AS PROVIDED IN THE PRECEDING PARAGRAPHS. HFC SHALL NOT BE LIABLE FOR ANY OTHER DAMAGES WHATSOEVER INCLUDING INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES.*

CONTENTS


1. Introduction -----	1
1.1 Model Number Designation-----	3
2. Specifications -----	7
3. Installation and Operation -----	9
3.1 Power Supply -----	9
3.2 Flowmeter Input -----	10
3.3 Pulse Output-----	12
3.4 Analog Output -----	14
3.5 Alarm Outputs -----	16
3.6 Communications Port-----	18
3.7 Wiring-----	19
APPENDIX A - Default Configuration -----	20
APPENDIX B - Declaration -----	22
APPENDIX C - Installation and Conditions for Safe Use Drawings for Certified Systems -----	24

1. Introduction

The CAT3 is a versatile DC or AC powered microprocessor-based transmitter, which provides pulse output, analog output and High/Low flow alarm options. Up to 3 circuit boards may be installed to provide a variety of input/output options.

The flowmeter input circuitry will accept a variety of signal types including, low level sinusoidal, MCP/RF, pulse and contact closure. Optional 20-point linearization is available to correct for flowmeter non-linearities, improving overall system accuracy. The CAT3 is compatible with all Hoffer turbine flowmeters as well as the H.O.G. series positive displacement flowmeters.

CAT3 Block Diagram

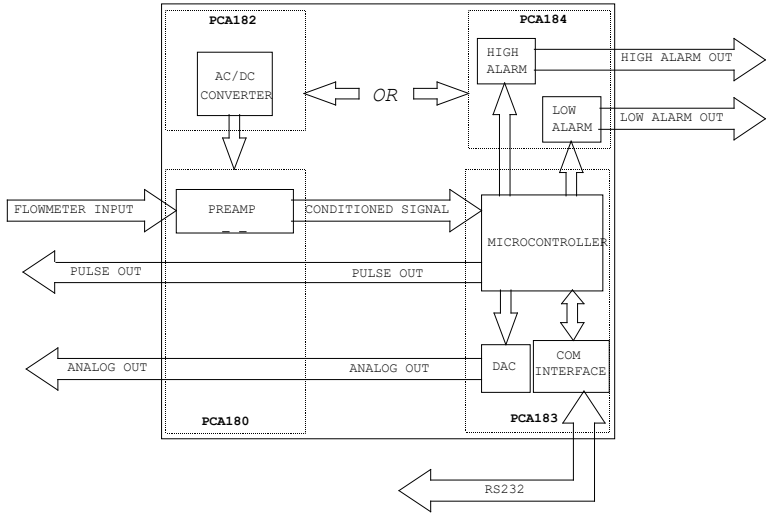


An RS232 communications port located under the top plate allows CAT3 to be remotely configured using DevConfig 3.0, a PC application program that is included with all units.

2 Introduction

The standard unit is packaged in an extruded aluminum enclosure for wall mounting or may be mounted directly on a flowmeter using an optional NEMA 4X or EX enclosure. An optional bracket is also available for mounting on standard DIN rail.

1.1 Model Number Designation

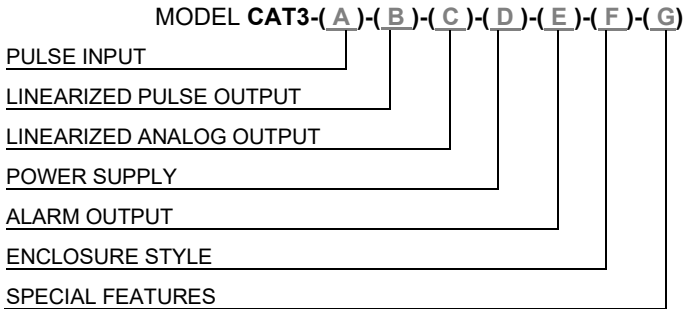

PULSE INPUT

MODEL **CAT3**-(A)-()-()-()-()-()-()

OPTION (A)

- (1) MAG COIL, PULSE, DRY CONTACT
- (2) MC3P
- (3) ISOLATED PULSE, RPM, RPR AND HALL EFFECT COILS

LINEARIZED PULSE OUTPUT

MODEL **CAT3**-()-(B)-()-()-()-()-()

OPTION (B)

- (1) 0-5 TTL / CMOS
- (2) OPEN COLLECTOR
- (3) OPEN COLLECTOR WITH PULL UP TO V+
- (4) AC SQUARE WAVE
- (5) 0-10V SQUARE WAVE

NOTE: NOT RECOMMENDED FOR USE AS A FLOW RATE SIGNAL.
MAXIMUM INPUT SENSOR FREQUENCY ALLOWED IS 100HZ.

LINEARIZED ANALOG OUTPUT

MODEL **CAT3**-()-()-(C)-()-()-()-()

OPTION (C)

- (1) 4-20 MA
- (5) 1-5 VDC

POWER SUPPLY

MODEL **CAT3**-()-()-()-(D)-()-()-()

OPTION (D)

- (DC) 13-30 VDC
- (AC) 100-240 VAC

NOTE: WHEN (AC) IS SELECTED, THE ALARM OPTION IS NOT AVAILABLE.
USE REMOTE ACC39B POWER SUPPLY IF REQUIRED.

4 Introduction

ALARM OUTPUT

MODEL **CAT3**-()-()-()-()-(E)-()-()

OPTION (E)

- (4) HIGH OPEN COLLECTOR
- (5) HIGH TTL / CMOS
- (6) HIGH RELAY ONE SPDT, CONTACT RATED @ 2A 30V
- (7) LOW OPEN COLLECTOR
- (8) LOW TTL / CMOS
- (9) LOW RELAY ONE SPDT, CONTACT RATED @ 2A 30V

NOTE: WHEN ALARM OPTION IS SELECTED, (AC) POWER IS NOT AVAILABLE. USE REMOTE ACC39B POWER SUPPLY.

ENCLOSURE STYLE

MODEL **CAT3**-()-()-()-()-()-(F)-()

OPTIONS (F)

- (1) GENERAL PURPOSE.
2.6"L X 2.6"H X 2.6"W MINIMUM MOUNTING SPACE.
- (D) 2" LONG DIN RAIL MOUNT SINGLE UNIT.
UP TO 20 CAT3 UNITS CAN BE MOUNTED ON A SINGLE RAIL. ADD 2" PER UNIT.
- (E3) EXPLOSION-PROOF (ALL CONDUIT PORTS ARE ¾" FNPT)
- (E3M) EXPLOSION-PROOF (CONDUIT PORTS D2 & D3 = M20 THR'D;
- (E4)* EXPLOSION-PROOF - FOR USE WITH AC POWERED CAT ONLY
(NOT Ex d SYSTEM CERTIFIED)
*FOR Ex d CERTIFIED SYSTEM USE E6 OR E6M ENCLOSURE
- (E6) EXPLOSION-PROOF STAINLESS STEEL
(ALL CONDUIT PORTS ARE ¾"FNPT)
- (E6M) EXPLOSION-PROOF STAINLESS STEEL (M20 NOT AVAILABLE FOR CANADA)

NOTE: FOR UL LISTED EXPLOSION-PROOF APPLICATIONS CONTACT FACTORY.

SPECIAL FEATURESMODEL CAT3-()-()-()-()-()-()-()-(G)**OPTIONS (G)**

- (CE) MARK REQUIRED FOR EUROPE
- (SP) ANY SPECIAL FEATURES THAT ARE NOT COVERED IN THE MODEL NUMBER, USE A WRITTEN DESCRIPTION OF THE -SP
- (MIL) DESIGNED TO MEET EMC STDS EN5011-1992 AND EN61326-1:1997
- (CFX) 6.75" LONG RISER AND UNION FOR EXPLOSION-PROOF **SYSTEM CERTIFIED ENCLOSURES** MOUNTED ON TURBINE. USED WITH "X" RISER TURBINE OPTION AND (EXP) OR (EX) SPECIAL FEATURES OPTION UNDER FLOWMETERS AS FOLLOWS:
 (EXP) FOR CANADIAN INSTALLATION OR
 (EX) FOR NON-CANADIAN INSTALLATION.
NOTE: IF PROCESS TEMP IS < -40°C AND > 79°C, EX-PROOF ENCLOSURE MUST BE MOUNTED REMOTELY.
- (C) REMOTED MOUNTED FOR EXPLOSION-PROOF **SYSTEM CERTIFIED ENCLOSURE. FOR USE WITH (C-EXP) OR (EX) SPECIAL FEATURES UNDER FLOWMETERS AS FOLLOWS:**
 (EXP) FOR CANADIAN INSTALLATION OR
 (EX) FOR NON-CANADIAN INSTALLATION.
NOTE: "X" RISER, CERTIFIED UNION, REDUCER AND ENCLOSURE (TO BE SPECIFIED) MOUNTED ON FLOWMETER
- (X) NO SPECIAL FEATURES

STYLE E3, E3M, E6 AND E6M SYSTEM CERTIFIED RATINGS

- CSA/FM: CLASS I, DIV. 1, GR. BCD; CLASS II, DIV. 1, GR. EFG;
 CLASS III, TYPE 4X,
 CLASS 1 ZONE 1 AEx db IIB + H2 T6/T5 Gb,
 Ex d IIB+H2 T6/T5; Gb; Ex tb T80°C/T86°C IIIC Db; IP66
 CLASS I, ZONE 21 AEx tb T80°C/T86°C IIIC Db; IP 66
- ATEX/IECEx: II 2 G Ex db IIB + H2, T6/T5 Gb
 II 2 D Ex tb IIIC T80°C/T86°C Db; IP66
 T6: -40°C ≤ Ta ≤ 79°C; T5: -40°C ≤ Ta ≤ 85°C

- NOTES: 1. IF ENCLOSURE IS MOUNTED ON TURBINE FLOWMETER, RISER MUST BE SPECIFIED ON METER.
2. PULSE SCALING IS SUPPLIED AS A STANDARD IN THE BASE PRISE AND IS SCALED TO THE UNIT MEASURE.
3. WINDOWS® BASED SETUP AND CABLE KIT CONSISTS OF:
 1 EA. HIT2A-301
 1 EA. CABLE MODEL 26886
 DEVICE CONFIGURATION DOWNLOAD IS AVAILABLE AT HOFFER FLOW CONTROLS WEBSITE UNDER "MANUALS & PROGRAMS" AND UNDER "CONFIGURATION PROGRAMS".
IF THE CAT IS SHIPPED UN-CALIBRATED, THIS MUST BE ORDERED TO CALIBRATE OR RE-CALIBRATE IN THE FIELD.

This page intentionally left blank.

2. Specifications

General Specifications

Input Signal Type:	Magnetic pick up, MCP pick up, Contact Closure, Pulse
Input Frequency Range:	0.2 Hz to 4 KHz
Signal Level:	10 mV rms to 30 Vdc
Power Supply:	13-30 Vdc (Reverse polarity protected) 100-240 Vac (Fuse rating 0.5A, 250 Vac)
Analog Output:	4-20mA, 1-5V
Analog Output Response Time:	1/8 sec.*
Load Resistance:	Max 650 Ohms at 24 Vdc
Accuracy:	+/- 0.02% of full scale @ 20° C
Temperature Drift:	40ppm/deg C
Pulse Output:	0-5, 0-10V, Open Collector, AC square Internal pull-up resistor 2.7k Ohms Recommended load min. 50k Ohms
Maximum Pulse Frequency:	1, 2, 4, 8, 100, 50% Duty Cycle
Pulse Scaling:	Per flow unit of measure, divide by 1, 10, 100
Hi/Lo Alarm:	Relay (2A, 30 Vdc), 0-5V, Open Collector (0.5A, 30 Vdc)
Communications:	RS232 port for Configuration and diagnostics
Operating Temperature:	T5 and STD: $-40^{\circ} \leq T_a \leq 85^{\circ} \text{C}$ T6: $-40^{\circ} \leq T_a \leq 79^{\circ} \text{C}$
Humidity:	0-90% Non-condensing
Enclosure:	Extruded aluminum DIN rail mount Explosion Proof
Regulatory:	CE compliant

*Limited by signal frequency and MST settings. Refer to Section 3.4.

Options

20 Point Linearization


8 Specifications

This page intentionally left blank.

3. Installation and Operation


3.1 Power Supply

DC Power (13-30 VDC)

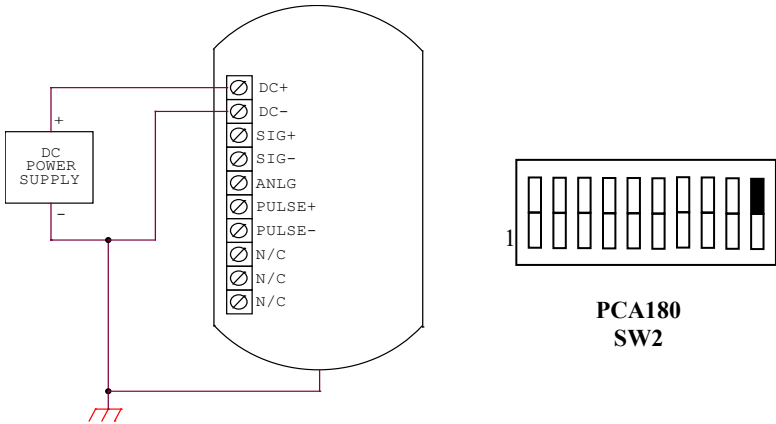

AC Power (100-240 VAC)

AC power for CAT3 requires an optional circuit board, PCA182. The Alarm option (PCA184) is not available when the AC Power option is equipped.

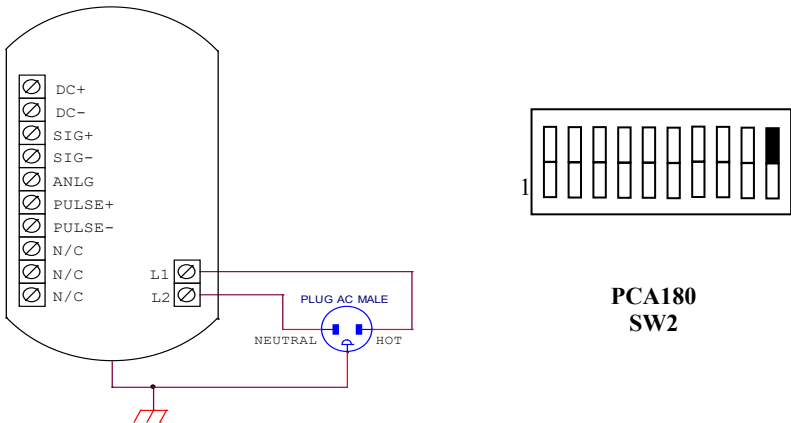


10 Installation and Operation


3.2 Flowmeter Input

The Preamp circuitry for conditioning the flow signal is located on PCA180. The following drawings illustrate typical connections and switch settings on PCA180 for various input signals.



Magnetic Pickup Coil

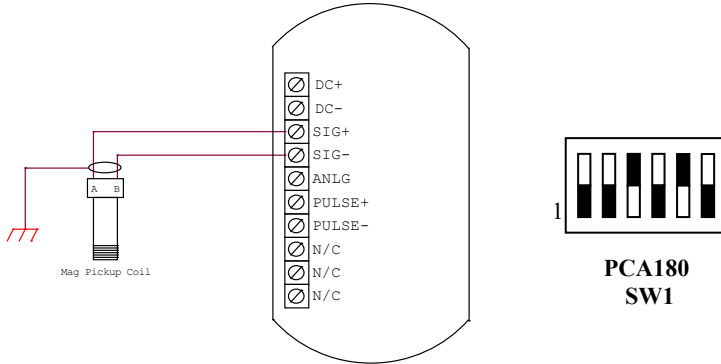

MCP/RF Coil


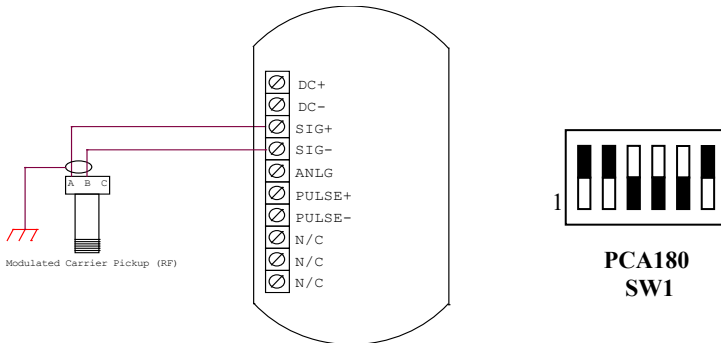


Redi-Pulse (TTL Pulse)

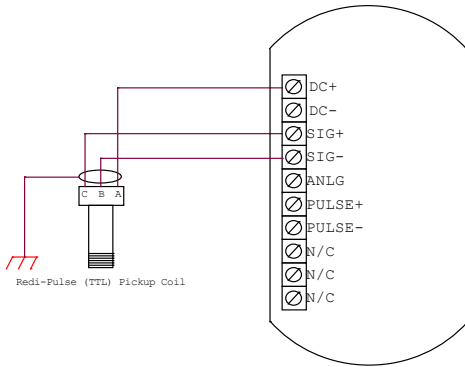

**PCA180
SW1**

Redi-Pulse (Open Collector)

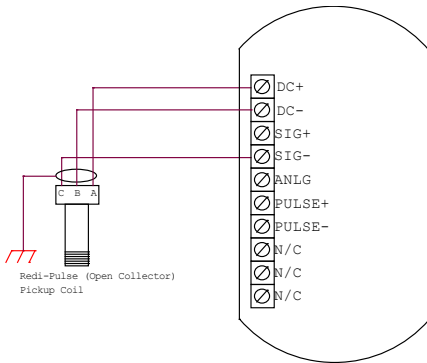



**PCA180
SW1**

12 Installation and Operation

3.3 Pulse Output


CAT3 provides a Pulse Output option that is scaled per flow unit of measure by a factor of 1, 10 or 100. Pulse output frequency varies with flow rate. The maximum frequency can be set at 1, 2, 4, 8, 100 Hz. The following drawings illustrate typical connections and switch settings for various pulse output options.

TTL(0-5V), 0-10V, High Level (DC In), AC Square

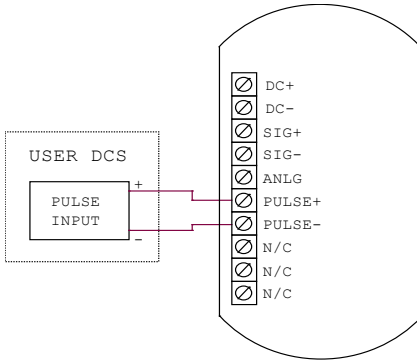

**PCA180
SW2**



TTL(0-5V), 0-10V, AC Square



**PCA180
SW2**


High Level Pulse, AC Square

Open Collector, Isolated Pulse

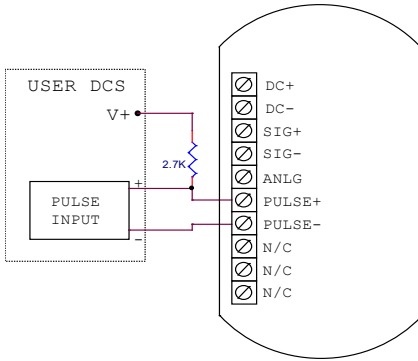

**PCA180
SW2**

Open Collector



**PCA180
SW2**



Isolated Pulse

14 Installation and Operation

3.4 Analog Output


CAT3 provides an Analog Output option that will output an analog current or voltage that is proportional to the flow rate.

Analog Output – DC Power

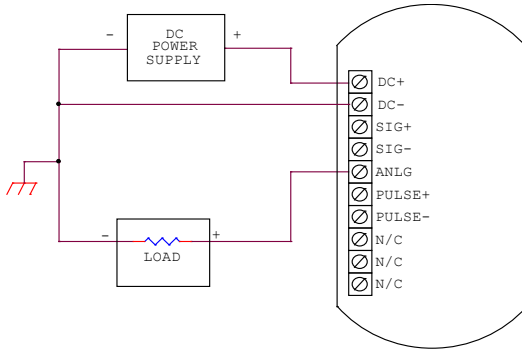

**PCA183
SW1**


4–20 mA Output



**PCA183
SW1**

1-5 V Output

Analog Output – AC Power

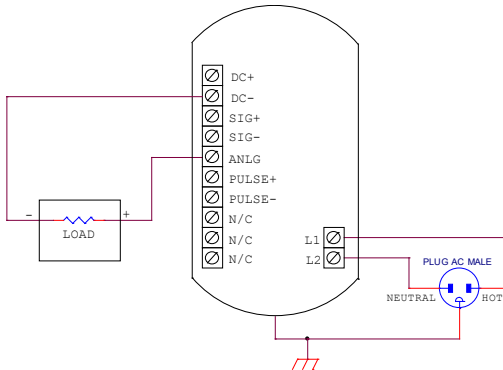

The Microcontroller, located on PCA183, accepts the square-wave output of the preamplifier and performs all of the calculations that are required to control the Loop Driver. After measuring the frequency of the square-wave, the Microcontroller uses the following equations to compute the flow rate and current.

$$\text{flowrate} = \frac{\text{frequency}}{\text{Kfactor}} \times 60^{\text{FM}} \times \text{CF}$$

Where:

- Kfactor = Is dependent on the Flow Calculation Method setting and is either the Average K-Factor or the Linearized K-Factor from the Frequency / K-Factor table.
- FM = Is the Flow rate Units setting of 0, 1, or 2. Where “0” is for Seconds, “1” is for Minutes, and “2” is for Hours.
- CF = Is the Correction Factor setting.

$$\text{current} = 4\text{mA} + \left(16\text{mA} \times \frac{\text{flowrate}}{\text{AF}} \right)$$

Where:

- AF = Is the 20mA maximum Flow rate value.

If the calculated flowrate is greater than the AF setting, the current will be set to 24mA to indicate an “Over-range” condition. After calculating the current, the Microcontroller digitally sends the current information to the Loop Driver. The loop driver, located on PCA183, uses the digital information sent to it by the Microcontroller to set the current of the loop. The Loop Driver also supplies power to the Microcontroller.


The analog output response time to reach steady state due to a change in the flow rate is approximately 1/8 of a second. When flow stops, the time for the analog output to return to 4 mA will be between .25 and 8 seconds, depending on the Maximum Sample Time (MST) setting. MST is adjusted using the NB=(DATA) command, where NB is a value between 1 and 80. The default MST setting is NB= 1. Adjusting the MST is only recommended for low flow applications where the minimum input frequency is below 1 Hz.

16 Installation and Operation


3.5 Alarm Outputs

CAT3 provides an optional High/Low Flow Alarm feature. Alarms require an optional circuit board, PCA184. The Alarm option is not available when the AC Power option is equipped. The drawings below illustrate the typical connections and switch settings for various alarm options.


Hi/Lo Alarm Relay

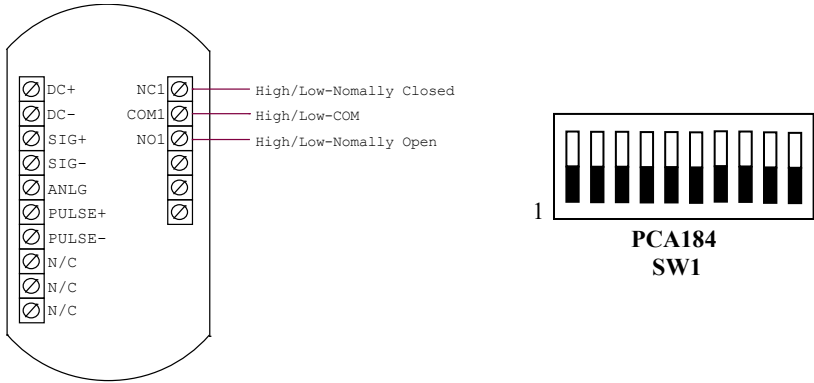

Hi/Lo Alarm TTL(0-5V)

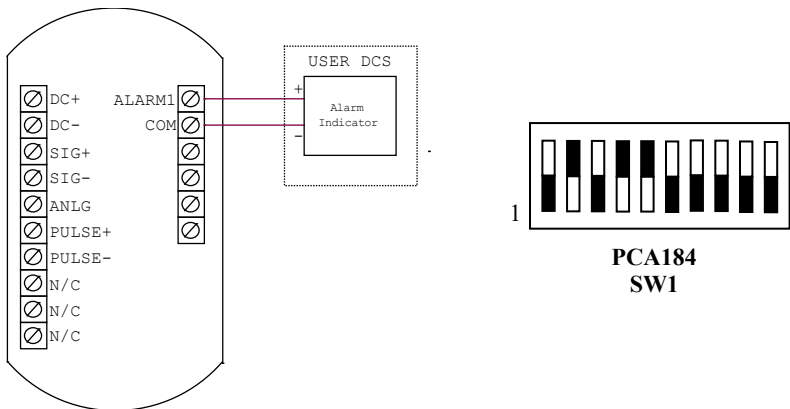

Hi/Lo Alarm Open Collector

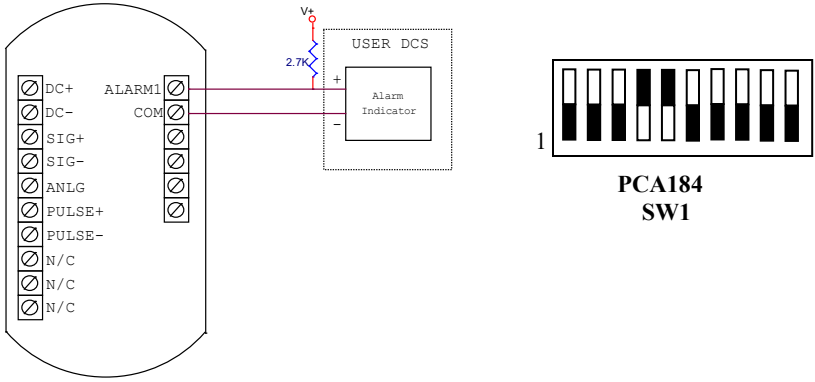

18 Installation and Operation


3.6 Communications Port

CAT3 is equipped with RS232 serial communication port for changing CAT3 configuration, diagnostics functions, and flow monitoring. Hoffer communication program DevConfig 3.0 must be used to communicate with CAT3.

The RS232 serial port connector is located under the top plate of CAT3 and may be accessed by removing the two screws from the top plate. A matching connector is provided with HOFFER HIT2A-301 Communications Cable. CAT3 unit has to be powered from external supply in order to be able to communicate. Additional power for CAT3 communication circuitry is supplied by the RS232 serial port of the computer/terminal. COM port settings must be set as follows:

Baud Rate: 2400
Data Bits: 8
Parity: None
Stop bits: 1
Handshaking: None

HOFFER HIT2A-301 Communications Cable

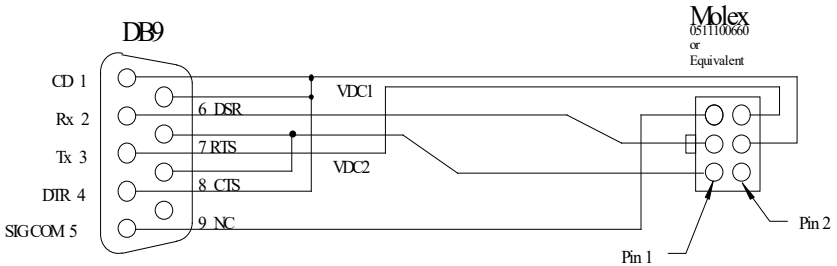

3.7 Wiring

When installing CAT3, it is a good practice to use shielded cables for all input and output signals. The shield should be connected to the earth ground lug on the CAT3. The shield on the opposite end of the cable should be left open. Connections are made to the CAT3 terminal blocks using wire gauges 16 to 28 AWG and 12 to 26 AWG (AC Power), tightening Torque 0.22 to 0.25Nm.

This wiring practice is mandatory in order to comply with the requirements for Electromagnetic Compatibility, as per EMC-Directive 2014/30/EU of the Council of European Community.

APPENDIX A - Default Configuration

FIELD	Value
FLOW CALC. METHOD	0 (Average)
K-FACTOR DECIMAL	3
AVERGAE K-FACTOR	1.00
NUMBER OF POINTS IN K-TABLE	10
FREQUENCY 01	4999.981
FREQUENCY 02	4999.982
FREQUENCY 03	4999.983
FREQUENCY 04	4999.984
FREQUENCY 05	4999.985
FREQUENCY 06	4999.986
FREQUENCY 07	4999.987
FREQUENCY 08	4999.988
FREQUENCY 09	4999.989
FREQUENCY 10	4999.990
FREQUENCY 11	4999.991
FREQUENCY 12	4999.992
FREQUENCY 13	4999.993
FREQUENCY 14	4999.994
FREQUENCY 15	4999.995
FREQUENCY 16	4999.996
FREQUENCY 17	4999.997
FREQUENCY 18	4999.998
FREQUENCY 19	4999.999
FREQUENCY 20	5000.000
K-FACTOR 01	1.00
K-FACTOR 02	1.00
K-FACTOR 03	1.00
K-FACTOR 04	1.00
K-FACTOR 05	1.00
K-FACTOR 06	1.00
K-FACTOR 07	1.00
K-FACTOR 08	1.00
K-FACTOR 09	1.00
K-FACTOR 10	1.00
K-FACTOR 11	1.00
K-FACTOR 12	1.00
K-FACTOR 13	1.00
K-FACTOR 14	1.00
K-FACTOR 15	1.00
K-FACTOR 16	1.00
K-FACTOR 17	1.00
K-FACTOR 18	1.00
K-FACTOR 19	1.00
K-FACTOR 20	1.00
MEASURING UNITS	GAL
FLOW RATE TIME UNITS	MIN
MAX SAMPLE TIME	01
ANALOG OUTPUT LOW	0.000
ANALOG OUTPUT HIGH	100.000
PULSE SCALE	OFF
PULSE FREQUENCY	100
ALARM FUNCTION	Off
ALARM LEVEL	100.000

APPENDIX B - Declaration of Conformity



EU Declaration of Conformity – CAT Series Transmitters

Manufacturer: Hoffer Flow Controls Inc, 107 Kitty Hawk Ln, Elizabeth City, NC 27909

Equipment: Flame Proof Transmitters

Designation/Model: CAT1-X-X-X-X, CAT2-X-X-X-X-X-X-X and CAT3-X-X-X-X-X-X-X

NOTE: "X" in Model number may be any combination of numbers and characters representing specific options.

Marking: With Aluminum Explosion Proof Enclosure

Class I, Division 1, Groups BCD; Class II, Division 1, Groups E,F,G; Class III; Type 4X;
Ex d IIB+H₂ T6/T5; Gb; Ex tb T80°C/T86°C IIIC Db; IP66;
Class I, Zone 1, AEx db IIB+H₂ T6/T5; Gb; Class I, Zone 21, AEx tb T80°C/T86°C IIIC Db; IP66:

II 2 G Ex db IIB+H₂ T6/T5 Gb
II 2 D Ex tb IIIC T80°C/T86°C Db IP66
T6 = -40°C to +79°C; T5 = -40°C to +85°C

Seal within 50mm of enclosure.

Marking: With Stainless Steel Enclosure

Class I, Division 1, Groups BCD; Class II, Division 1, Groups E,F,G; Class III; Type 4X;
Ex d IIB+H₂ T6/T5; Gb; Ex tb T80°C/T86°C IIIC Db; IP66;
Class I, Zone 1, AEx db IIB+H₂ T6/T5; Gb; Class I, Zone 21, AEx tb T80°C/T86°C IIIC Db; IP66:

II 2 G Ex db IIB+H₂ T5/T6 Gb
II 2 D Ex tb IIIC T86°C Db IP66
T6 = -40°C to +79°C; T5 = -40°C to +85°C

Seal within 18" of enclosure.



107 Kitty Hawk Lane • P.O. Box 2145 • Elizabeth City, North Carolina 27906-2145
 1-800-628-4584 • (252) 331-1997 • FAX (252) 331-2886
 www.hofferflow.com • Email: info@hofferflow.com



This declaration of conformity is issued under the sole responsibility of the manufacturer. The object of the declaration is in conformity with the relevant Union harmonisation Legislation. We hereby declare that the product, which is subject of this declaration, is in conformity with the following standards:

ATEX	ATEX Directive 2014/34/EU: Equipment and protective systems intended for use in potentially explosive atmospheres. Applicable Standards - EN 60079-0:2017; EN 60079-1:2014 and EN 60079-31:2014	EU-Type Examination Certificate: Sira 16 ATEX 1086 X
CSA	Applicable CSA Requirements: CSA C22.2 No. 0-10, CSA C22.2 no. 142-M1987, CSA C22.2 No. 25-1966 (R2014), CSA C22.2 No. 30-M1986 (R2012), UL 508, CAN-CSA 60079-0:11, 60079-1:11 60079-39:12, FM 3600, FM 3615, FM 3616, UL 60079-0:2013, 60079-1: 2015 and 60079-31:2015	CSA-Type Examination Certificate:
IECEX	IEC Certification for Explosive Atmospheres. Applicable Standards IEC 60079-0:2017 IEC 60079-1:2014 and IEC 60079-31:2013	IECEX CSA 16.0016X

EU-Directive 2014/34/EU Annex IV/IECEX Certificate issued by:

The Certification Body for Explosion Protection
 of TÜV Rheinland Industrie Service GmbH


Certificate No.: 01 220 1609028 Notified Body Number: 0035

EU type examination certificate issued by: Certificate: Sira 16 ATEX 1086 X CSA Group Netherlands B.V. Utrechseweg 310 6812 AR Arnhem Netherlands	CSA-Type Examination Certification issued by: CSA Group Testing & Certification Inc. Edmonton, AB, Canada T6N 1E6
---	---

Date: 12/11/2020

John DeFeo, Compliance Engineer
 Hoffer Flow Controls, Inc.

APPENDIX C - Installation and Conditions for Safe Use Drawings for Certified Systems

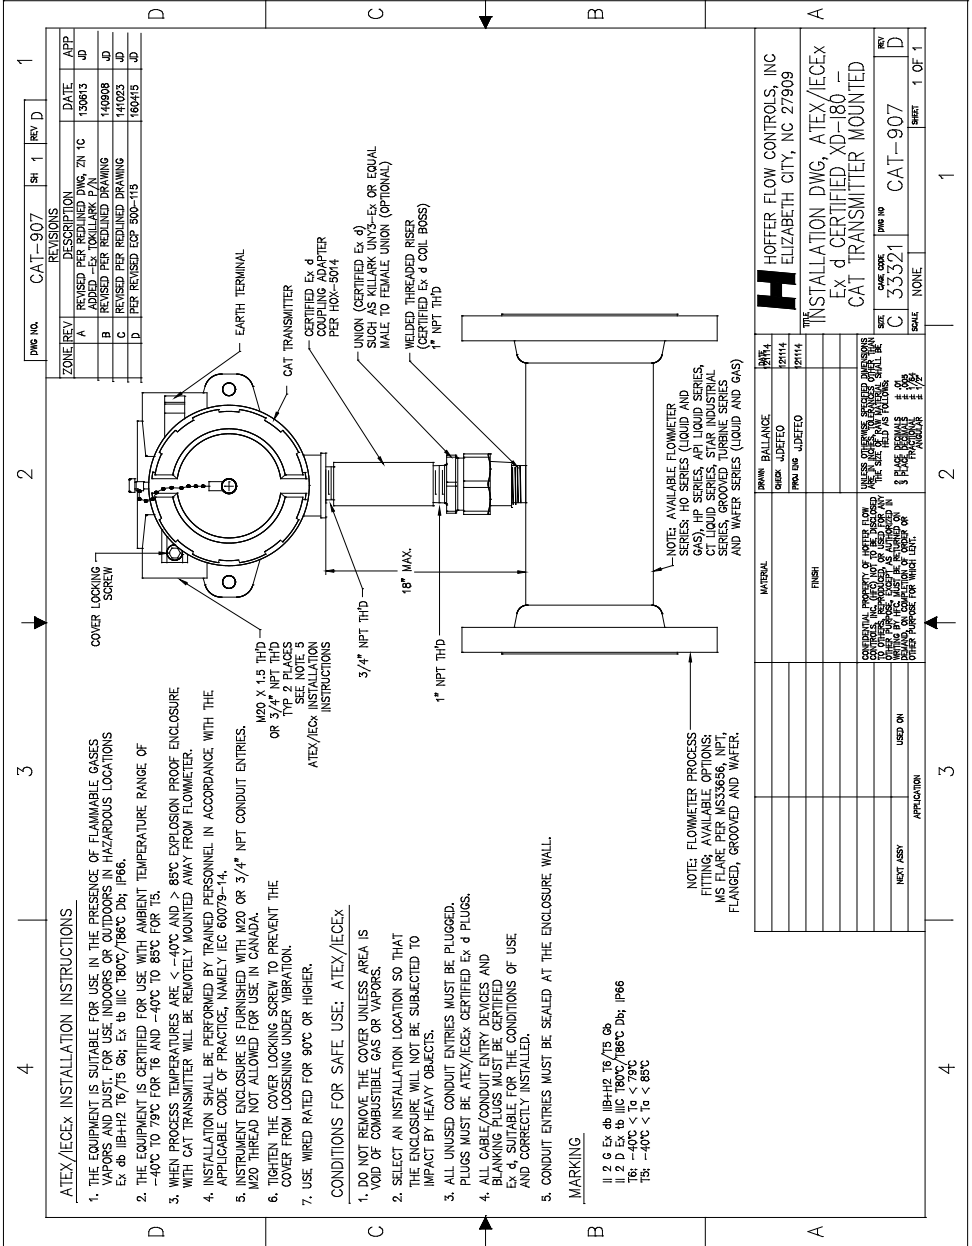

ZONE REV		CAT-907		SH	1	REV	D
A	REVISED PER REDLINED DRAWING	DESCRIPTION	DATE	APP			
B	REVISED PER REDLINED DRAWING	DESCRIPTION	DATE	APP			
C	REVISED PER REDLINED DRAWING	DESCRIPTION	DATE	APP			
D	PER REVISED EXP 500-115	DESCRIPTION	DATE	APP			

ZONE	REV	DESCRIPTION	DATE	APP
A	REVISED PER REDLINED DRAWING	DESCRIPTION	DATE	APP
B	REVISED PER REDLINED DRAWING	DESCRIPTION	DATE	APP
C	REVISED PER REDLINED DRAWING	DESCRIPTION	DATE	APP
D	PER REVISED EXP 500-115	DESCRIPTION	DATE	APP

ATEX/IECx INSTALLATION INSTRUCTIONS

- THE EQUIPMENT IS SUITABLE FOR USE IN THE PRESENCE OF FLAMMABLE GASES, VAPORS AND DUST, FOR USE INDOORS OR OUTDOORS IN HAZARDOUS LOCATIONS. Ex db IIB/H2 T6/T5 Gb, Ex tb IIC T80C/T86C Db; IP66.
- THE EQUIPMENT IS CERTIFIED FOR USE WITH AMBIENT TEMPERATURE RANGE OF -40°C TO 78°C FOR T6 AND -40°C TO 85°C FOR T5.
- WHEN PROCESS TEMPERATURES ARE < -40°C AND > 85°C EXPLOSION PROOF ENCLOSURE AFFLAGEABLE CODE OF PRACTICE, NAMELY IEC 60079-14.
- INSTALLATION SHALL BE PERFORMED BY TRAINED PERSONNEL IN ACCORDANCE WITH THE AFFLAGEABLE CODE OF PRACTICE, NAMELY IEC 60079-14.
- INSTRUMENT ENCLOSURE IS FURNISHED WITH M20 OR 3/4" NPT CONDUIT ENTRIES.
- TIGHTEN THE COVER LOCKING SCREW TO PREVENT THE COVER FROM LOOSENING UNDER VIBRATION.
- USE WIRE RATED FOR 90°C OR HIGHER.

CONDITIONS FOR SAFE USE: ATEX/IECx

- DO NOT REMOVE THE COVER UNLESS AREA IS VOID OF COMBUSTIBLE GAS OR VAPORS.
- SELECT AN INSTALLATION LOCATION SO THAT THE ENCLOSURE WILL NOT BE SUBJECTED TO IMPACT BY HEAVY OBJECTS.
- ALL UNUSED CONDUIT ENTRIES MUST BE PLUGGED. PLUGS MUST BE ATEX/IECx CERTIFIED Ex d PLUGS.
- ALL CABLE/CONDUIT ENTRY DEVICES AND BLANKING PLUGS MUST BE CERTIFIED Ex d EQUIPMENT FOR THE CONDITIONS OF USE AND CORRECTLY INSTALLED.
- CONDUIT ENTRIES MUST BE SEALED AT THE ENCLOSURE WALL.

MARKING:

II 2 G Ex db IIB/H2 T6/T5 Gb
 II 2 D Ex db IIC T80C/T86C Db; IP66
 T6: -40°C < Ta < 78°C
 T5: -40°C < Ta < 85°C

COVER LOCKING SCREW

EARTH TERMINAL

CAT TRANSMITTER

CERTIFIED Ex d COUPLING ADAPTER PER IEC 60079-50/4

UNION (CERTIFIED Ex d) SUCH AS KILLARK UNWG-Ex OR EQUAL MALE TO FEMALE UNION (OPTIONAL)

WELDED THREADED RISER (CERTIFIED Ex d COIL BOSS)

1" NPT THD

18" MAX.

3/4" NPT THD

M20 X 1.5 THD OR 3/4" NPT THD PER IEC 60079-14. SEE NOTE 5. ATEX/IECx INSTALLATION INSTRUCTIONS

NOTE: AVAILABLE FLOWMETER SERIES: HIO SERIES (LIQUID AND GAS), HP SERIES, API LIQUID SERIES, CT LIQUID SERIES, STAR INDUSTRIAL SERIES, GROOVED TURBINE SERIES AND WAFER SERIES (LIQUID AND GAS)

NOTE: FLOWMETER PROCESS FITTING; AVAILABLE OPTIONS: M35 FLARE PER MSS3056, NPT, FLANGED, GROOVED AND WAFER.

MATERIAL	QTY	DESCRIPTION
FINISH		

DRAWN	BALANCE	CHECK	DATE	DATE	DATE

COMPANY	PROJECT NO.	REVISED	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY

DATE	BY	DATE	BY


HOFFER FLOW CONTROLS, INC
 ELIZABETH CITY, NC 27909

THIS INSTALLATION DWG, ATEX/IECx Ex d CERTIFIED XD-180 - CAT TRANSMITTER MOUNTED

DATE	REV
C 3/5/21	CAT-907
D	

1 OF 1

Appendix C - Installation and Safe Use Drawings 27

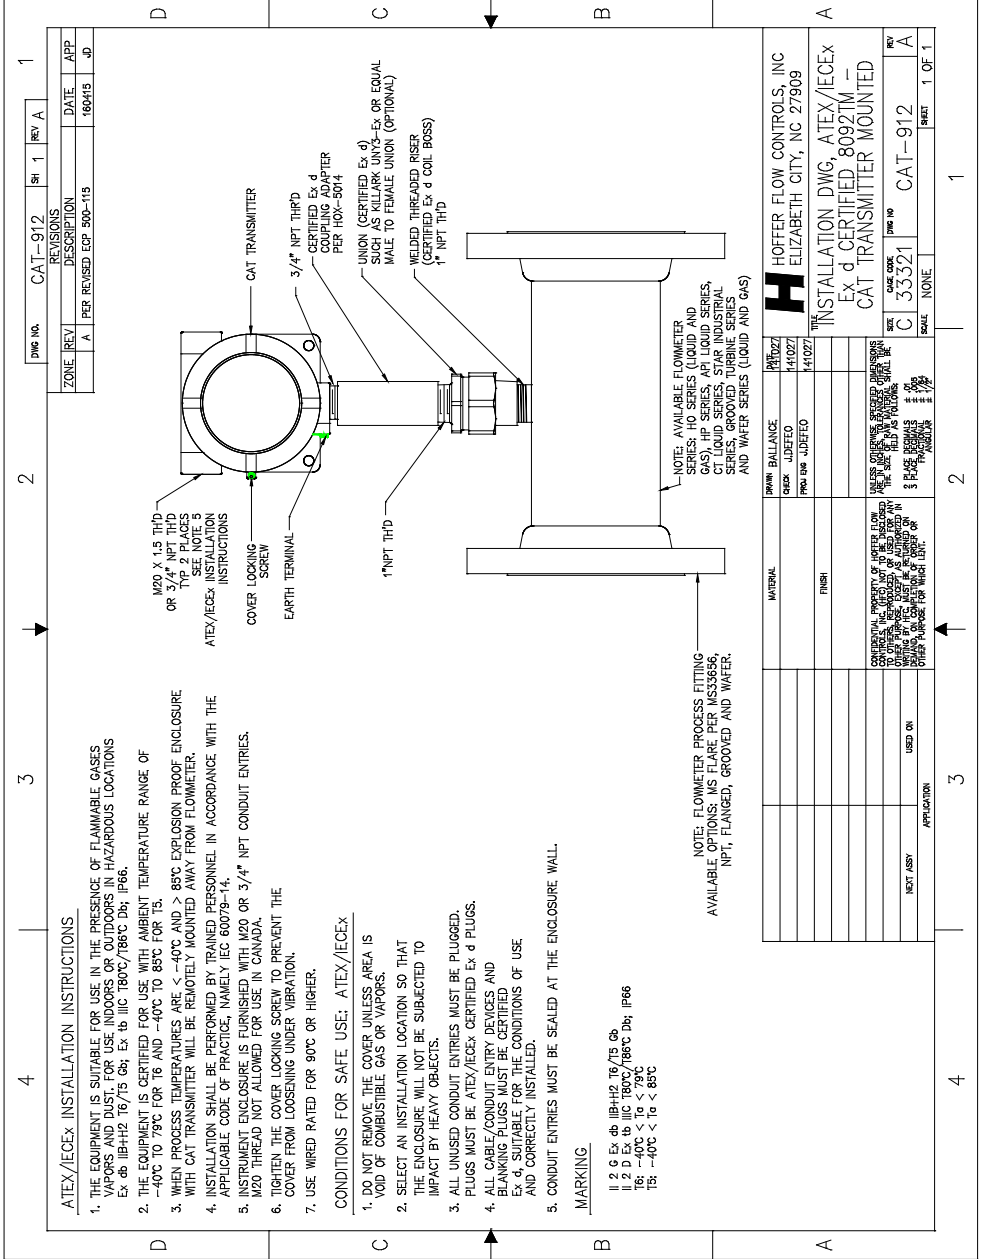

- ATEX/IECEX INSTALLATION INSTRUCTIONS
- THE EQUIPMENT IS SUITABLE FOR USE IN THE PRESENCE OF FLAMMABLE GASES (VAPORS AND MIST) FOR USE INDOORS OR OUTDOORS IN HAZARDOUS LOCATIONS Ex db IIB+H2 16/15 Gb; Ex to IIC 180C/186C Db; IP66.
 - THE EQUIPMENT IS CERTIFIED FOR USE WITH AMBIENT TEMPERATURE RANGE OF -40°C TO 70°C FOR 16 AND -40°C TO 85°C FOR 15.
 - WHEN PROCESS TEMPERATURES ARE $< 40^{\circ}\text{C}$ AND $> 85^{\circ}\text{C}$ EXPLOSION PROOF ENCLOSURE WITH CAT TRANSMITTER WILL BE REMOTELY MOUNTED AWAY FROM FLOWMETER.
 - INSTALLATION SHALL BE PERFORMED BY TRAINED PERSONNEL IN ACCORDANCE WITH THE APPLICABLE CODE OF PRACTICE, NAMELY IEC 60079-14.
 - INSTRUMENT ENCLOSURE IS FURNISHED WITH M20 OR $3/4"$ NPT CONDUIT ENTRIES.
 - M20 THREAD NOT ALLOWED FOR USE IN CANADA.
 - TIGHTEN THE COVER LOCKING SCREW TO PREVENT THE COVER FROM LOOSENING UNDER VIBRATION.
 - USE WIRE RATED FOR 90°C OR HIGHER.

- CONDITIONS FOR SAFE USE: ATEX/IECEX
- DO NOT REMOVE THE COVER UNLESS AREA IS VOID OF COMBUSTIBLE GAS OR VAPORS.
 - SELECT AN INSTALLATION LOCATION SO THAT THE ENCLOSURE WILL NOT BE SUBJECT TO IMPACT BY HEAVY OBJECTS.
 - ALL UNUSED CONDUIT ENTRIES MUST BE PLUGGED. PLUGS MUST BE ATEX/IECEX CERTIFIED Ex d PLUGS.
 - ALL CABLE/CONDUIT ENTRY DEVICES AND BLANKING PLUGS MUST BE CERTIFIED Ex d, SUITABLE FOR THE CONDITIONS OF USE AND CORRECTLY INSTALLED.
 - CONDUIT ENTRIES MUST BE SEALED AT THE ENCLOSURE WALL.

- MARKING
- II 2 G Ex db IIB+H2 16/15 Gb
 - II 2 D Ex tb IIC 180C/186C Db; IP66
 - 100% HUMIDITY RESISTANT
 - 150°C TSS
 - 150°C TIS
 - 150°C TIS; $-40^{\circ}\text{C} < \text{Tb} < 85^{\circ}\text{C}$


NOTE: FLOWMETER PROCESS FITTING AVAILABLE OPTIONS: MS FLARE, PER MS33656, NPT, FLANGED, GROOVED AND WATER.

NOTE: AVAILABLE FLOWMETER SERIES: H0 SERIES (LIQUID AND GAS), H1 SERIES (LIQUID AND GAS), H2 SERIES (STAR SERIES), H3 SERIES (STAR SERIES), H4 SERIES (GROOVED TURBINE SERIES) AND WATER SERIES (LIQUID AND GAS)

DATE	REVISED ECP 500-115	DESCRIPTION	CAT-912	SH	1	REV	A																										
ZONE	REV	DATE	APP		D																												
<table border="1"> <tr> <td>DRAWING NO.</td> <td>CAT-912</td> </tr> <tr> <td>REV</td> <td>1</td> </tr> <tr> <td>DATE</td> <td>16/04/15</td> </tr> <tr> <td>APP</td> <td>16/04/15</td> </tr> <tr> <td>DRW</td> <td>16/04/15</td> </tr> <tr> <td>REV</td> <td>1</td> </tr> <tr> <td>DATE</td> <td>16/04/15</td> </tr> <tr> <td>APP</td> <td>16/04/15</td> </tr> <tr> <td>DRW</td> <td>16/04/15</td> </tr> <tr> <td>REV</td> <td>1</td> </tr> <tr> <td>DATE</td> <td>16/04/15</td> </tr> <tr> <td>APP</td> <td>16/04/15</td> </tr> <tr> <td>DRW</td> <td>16/04/15</td> </tr> </table>								DRAWING NO.	CAT-912	REV	1	DATE	16/04/15	APP	16/04/15	DRW	16/04/15	REV	1	DATE	16/04/15	APP	16/04/15	DRW	16/04/15	REV	1	DATE	16/04/15	APP	16/04/15	DRW	16/04/15
DRAWING NO.	CAT-912																																
REV	1																																
DATE	16/04/15																																
APP	16/04/15																																
DRW	16/04/15																																
REV	1																																
DATE	16/04/15																																
APP	16/04/15																																
DRW	16/04/15																																
REV	1																																
DATE	16/04/15																																
APP	16/04/15																																
DRW	16/04/15																																
MATERIAL	FURNISH	DRAWN BALANCE CHECK JUEFED PROJ ENG JUEFED																															
APPLICATION	USED ON	CONFIDENTIAL PROPERTY OF HOFFER FLOW METER MANUFACTURING CO. ANY REPRODUCTION OR USE OF THIS DRAWING WITHOUT THE WRITTEN PERMISSION OF HOFFER FLOW METER MANUFACTURING CO. IS PROHIBITED.																															
SCALE	NONE	DATE	14/02/17	BY	JUEFED	REV	1																										
SHEET	1	OF	1	CHECKED	C	DATE	3/3/21																										
SCALE	NONE	DATE	14/02/17	BY	JUEFED	REV	1																										
SHEET	1	OF	1	CHECKED	C	DATE	3/3/21																										

H OFFER FLOW CONTROLS, INC
 ELIZABETH CITY, NC 27809


INSTALLATION DWG. ATEX/IECEX
 Ex d CERTIFIED 8092TM
 CAT TRANSMITTER MOUNTED

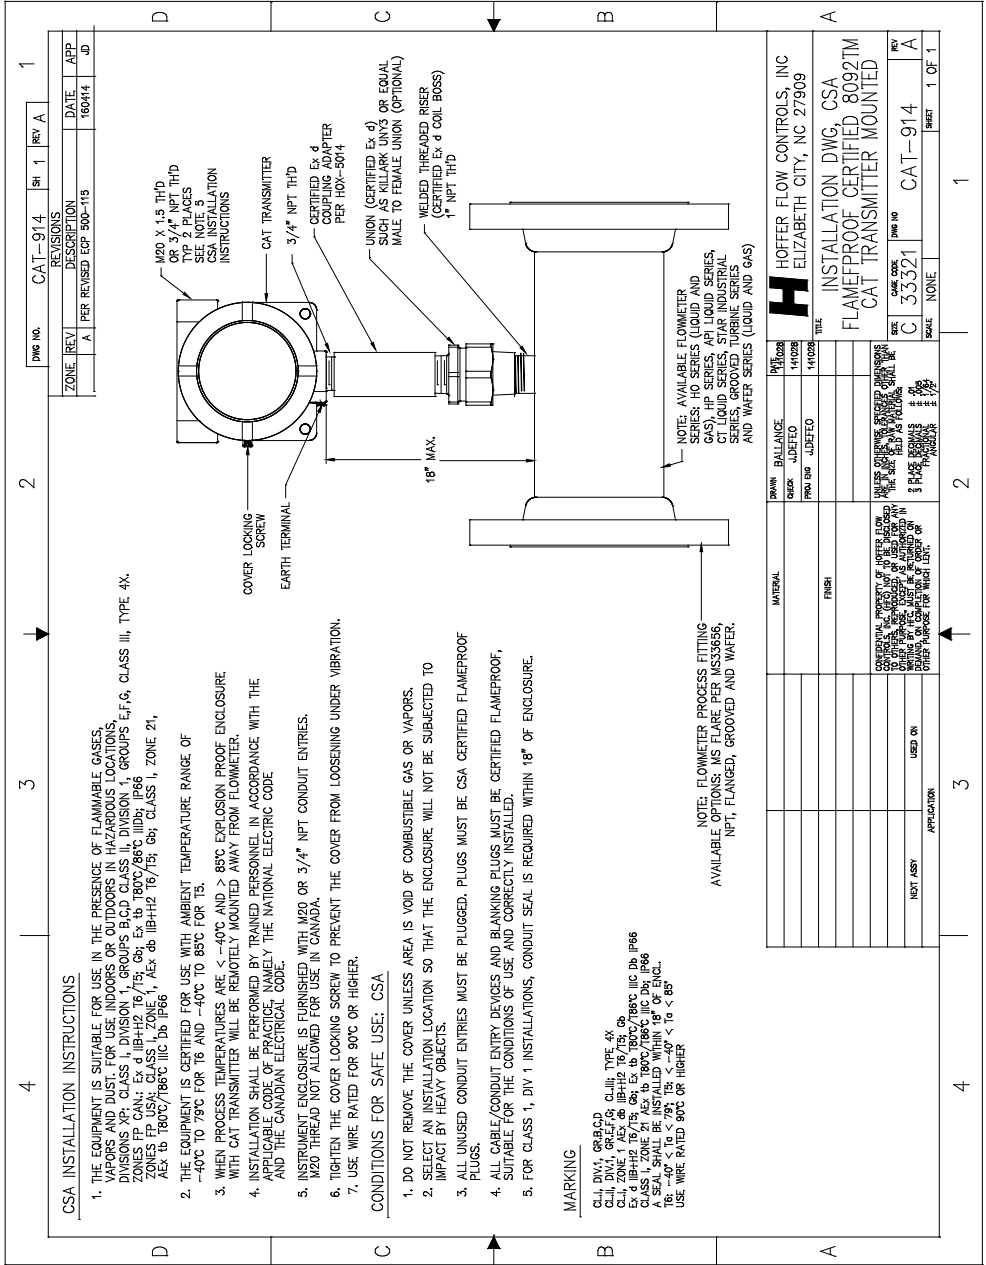

DWG NO.	CAT-914	SH	1	REV	A
REVISIONS					
ZONE	REV	DESCRIPTION	DATE	APP	JD
A	PER	REVISED ECP 500-119	160414		

DRAWN	BALANCE	141028	HOFFER FLOW CONTROLS, INC
CHECK	141028	ELIZABETH CITY, NC 27809	
PROJ. ENG	JDE/TEO		
TITLE			
INSTALLATION DWG. CSA			
FLAMEPROOF CERTIFIED 8092TM			
CAT TRANSMITTER MOUNTED			
SCALE	CAD CODE	DWG NO	REV
C	33321	CAT-914	A
SHEET 1 OF 1			

MATERIAL		FINISH	
CONVENTIONAL PROPERTY OF HOFFER FLOW CONTROLS, INC. (NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM.)			
UNLESS OTHERWISE SPECIFIED DIMENSIONS ARE IN INCHES AND DECIMALS THEREOF. DIMENSIONS IN PARENTHESES ARE FOR REFERENCE ONLY.			
NOT LIST	USED ON	APPLICATION	

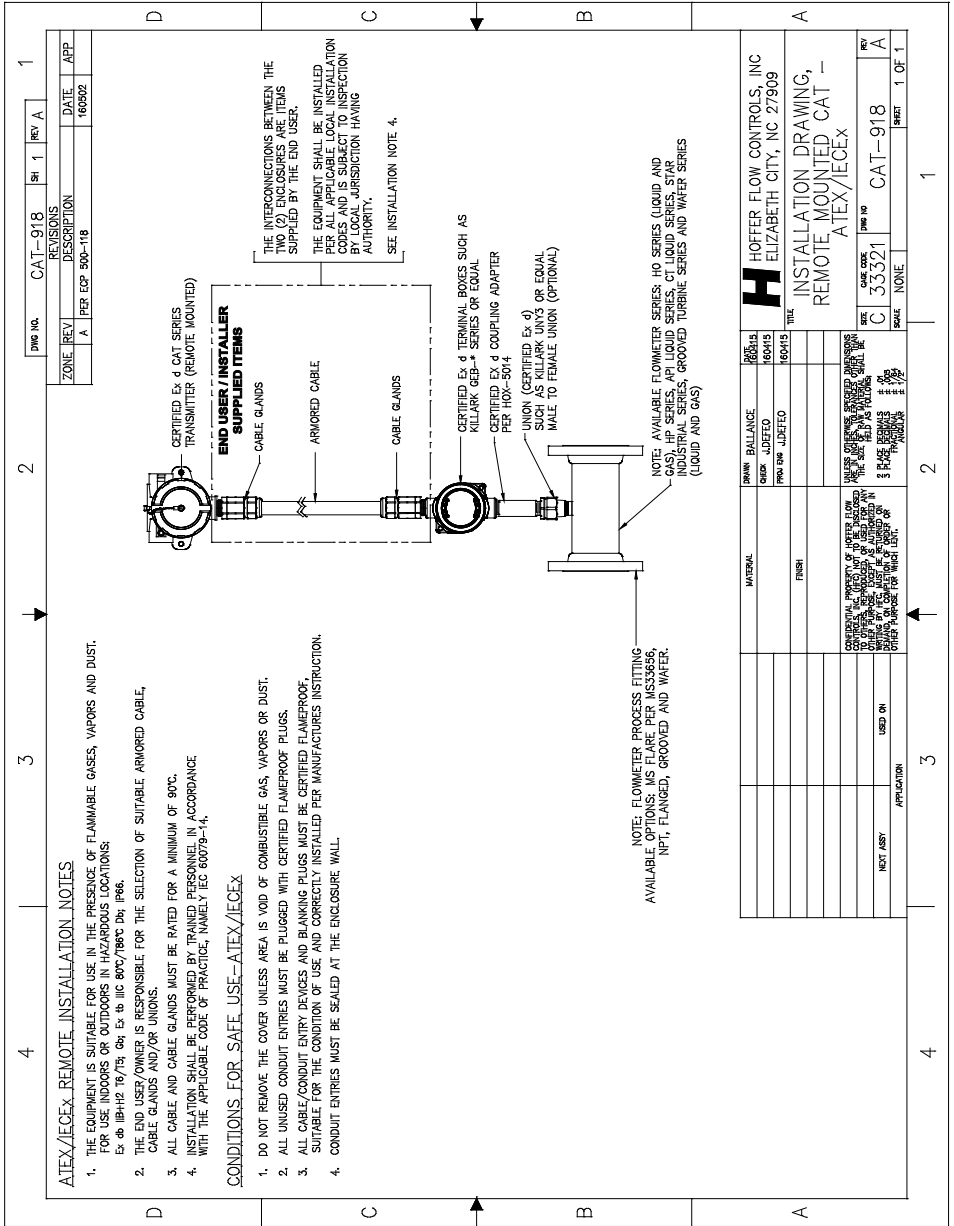

Zone	REV	DESCRIPTION	DATE	APP
A		PER EXP 500-118	10/2002	

Drawn	Ballance	160415
Check	Judefco	160415
Proj Eng	Judefco	160415

Material	FINISH
CONTINENTAL PROPERTY OF HOFFER FLOW CONTROLS, INC. ALL RIGHTS RESERVED. THIS DRAWING IS UNCLASSIFIED AND NOT BE LOANED, REPRODUCED, COPIED, OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, WITHOUT THE WRITTEN PERMISSION OF HOFFER FLOW CONTROLS, INC.	
Part Assy	USED ON
Application	

Part No	33321	Rev	A
Scale	NONE	Sheet	1 OF 1

Drawn	Ballance	160415
Check	Judefco	160415
Proj Eng	Judefco	160415

Part No	33321	Rev	A
Scale	NONE	Sheet	1 OF 1

1. THE EQUIPMENT IS SUITABLE FOR USE IN THE PRESENCE OF FLAMMABLE GASES, VAPORS AND DUST. FOR USE INDOORS OR OUTDOORS IN HAZARDOUS LOCATIONS.
Ex db IIBH12 16/19; Ob; Ex tb IIC 80%/788% Db; IP66.

2. THE END USER/OWNER IS RESPONSIBLE FOR THE SELECTION OF SUITABLE ARMORED CABLE, CABLE GLANDS AND/OR UNIONS.

3. ALL CABLE AND CABLE GLANDS MUST BE RATED FOR A MINIMUM OF 90°C.

4. INSTALLATION SHALL BE PERFORMED BY TRAINED PERSONNEL IN ACCORDANCE WITH THE APPLICABLE CODE OF PRACTICE, NAMELY IEC 60079-14.

CONDITIONS FOR SAFE USE-ATEX/IECEx

1. DO NOT REMOVE THE COVER UNLESS AREA IS VOID OF COMBUSTIBLE GAS, VAPORS OR DUST.

2. ALL UNUSED CONDUIT ENTRIES MUST BE PLUGGED WITH CERTIFIED FLAMEPROOF PLUGS.

3. ALL CABLE/CONDUIT ENTRY DEVICES AND BLANKING PLUGS MUST BE CERTIFIED FLAMEPROOF SUITABLE FOR THE CONDITION OF USE AND CORRECTLY INSTALLED PER MANUFACTURERS INSTRUCTION.

4. CONDUIT ENTRIES MUST BE SEALED AT THE ENCLOSURE WALL.

THE INTERCONNECTIONS BETWEEN THE TWO (2) ENCLOSURES ARE ITEMS SUPPLIED BY THE END USER.

THE EQUIPMENT SHALL BE INSTALLED PER ALL APPLICABLE LOCAL INSTALLATION CODES AND IS SUBJECT TO INSPECTION BY THE LOCAL JURISDICTION HAVING AUTHORITY.

SEE INSTALLATION NOTE 4.

CERTIFIED EX d TERMINAL BOXES SUCH AS KILLARK GEB-4 SERIES OR EQUAL PER IEC 60079-14

UNION (CERTIFIED EX d) SUCH AS KILLARK UNYS OR EQUAL MALE TO FEMALE UNION (OPTIONAL)

NOTE: AVAILABLE FLOWMETER SERIES: HQ SERIES (LIQUID AND GAS), HP SERIES, API LIQUID SERIES, STAR INDUSTRIAL SERIES, GROOVED TURBINE SERIES AND WAFER SERIES (LIQUID AND GAS)

NOTE: FLOWMETER PROCESS FITTING AVAILABLE, OPTIONS: MS FLARE PER MS23656, NPT, FLANGED, GROOVED AND WATER.